








REGULAR BRICKS

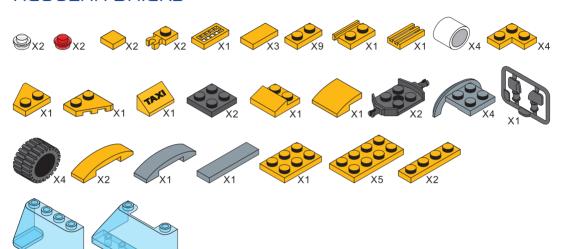

 STICKER



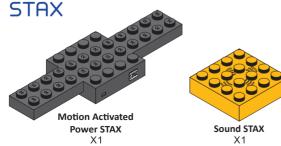











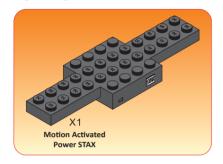





1-2



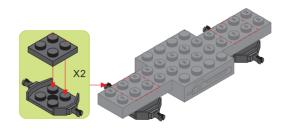





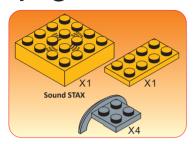

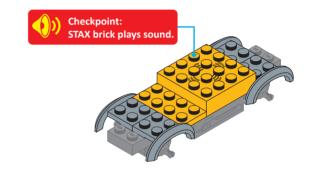


1-4

 


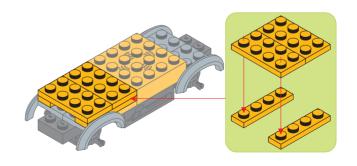





1-5

 


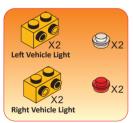


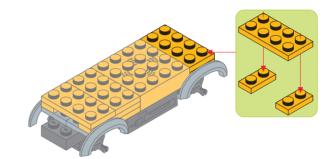

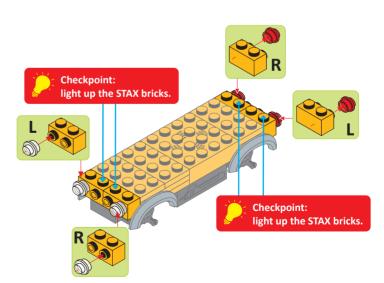





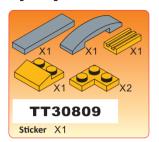

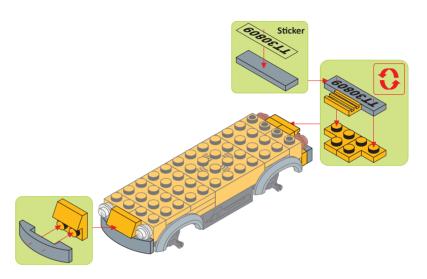


1-8

 

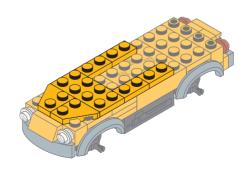






1-9

 



 

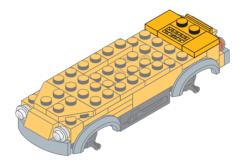


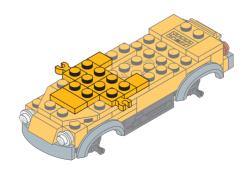





1-11



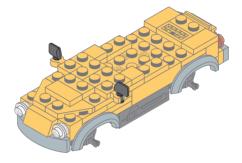


1-12

 

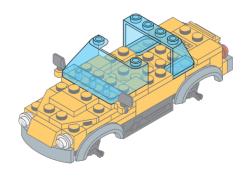





1-13

 

1-14



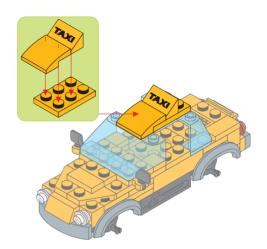


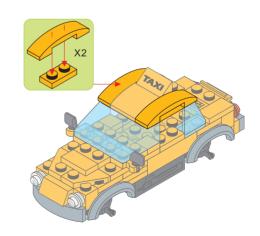




1-15



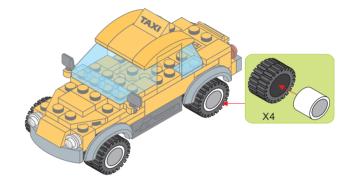

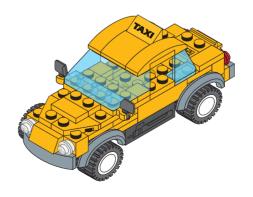



	1. To replace the CR2032 button celt battery, please see the 4x12 Fower base histraction manual.
ï	

Special instructions: