

 
 


**HYBRID - CASH CARRIER**









1-1

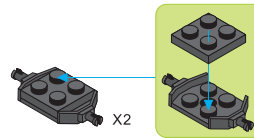



1-2

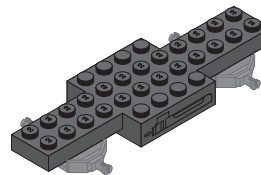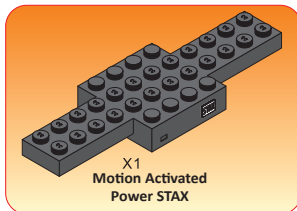  


# 1-3

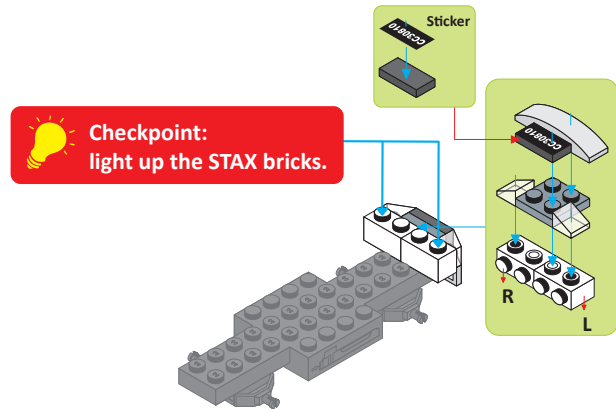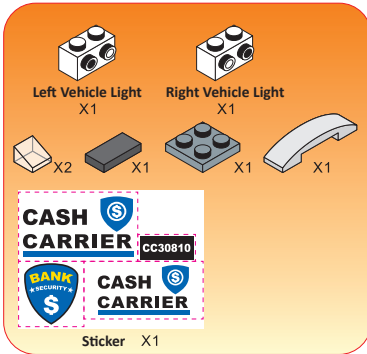  


# 1-4

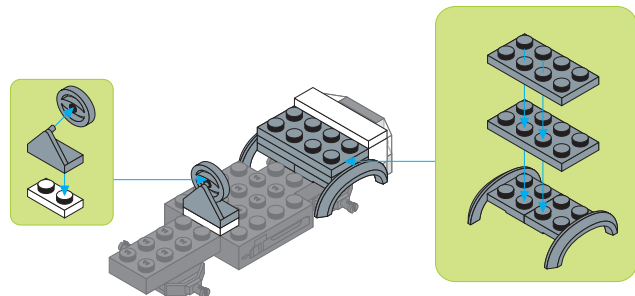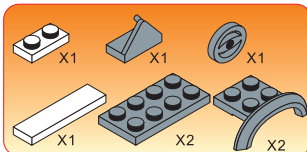  



# 1-5

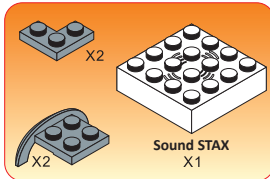 



 Checkpoint:  
STAX brick plays sound.

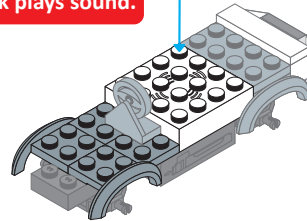 



# 1-6

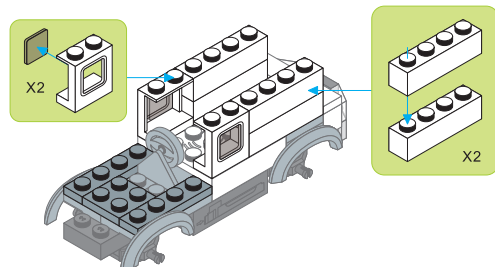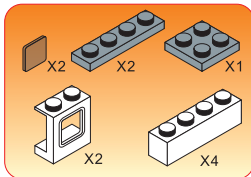  



1-7

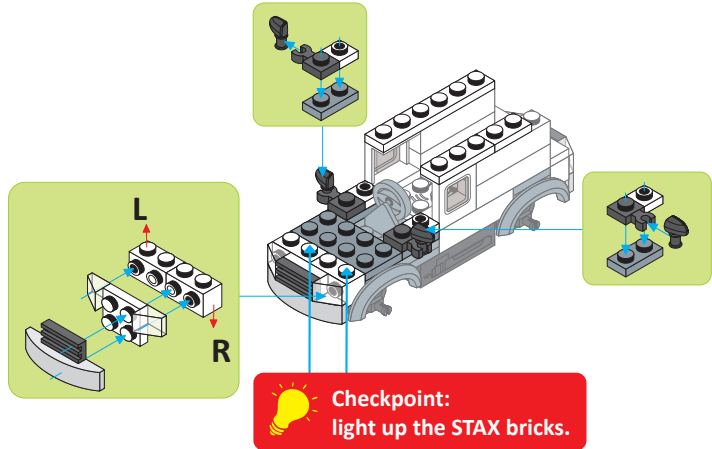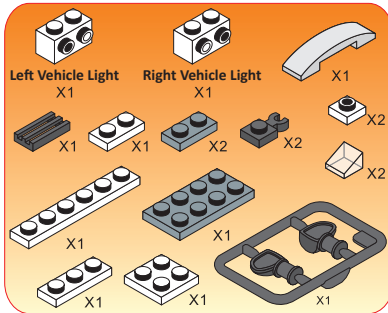  



1-8

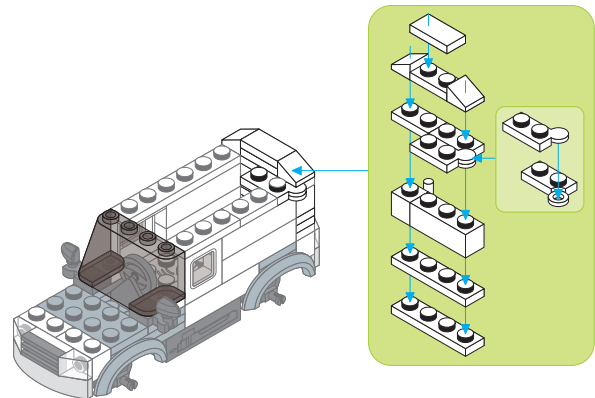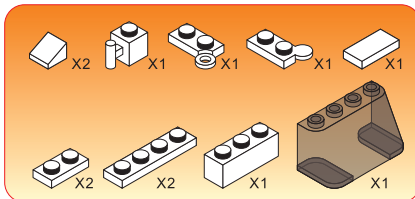  


1-9

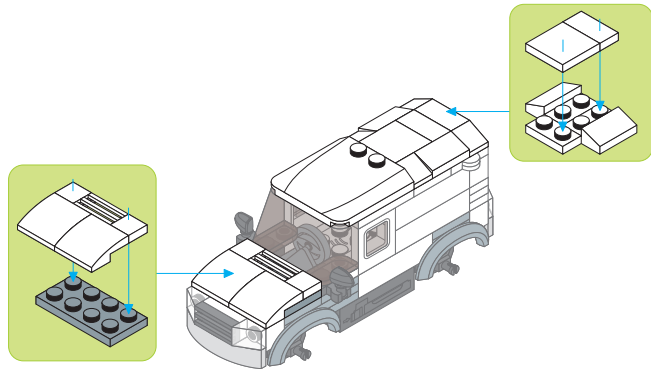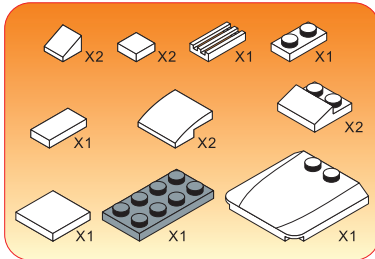  

1-10

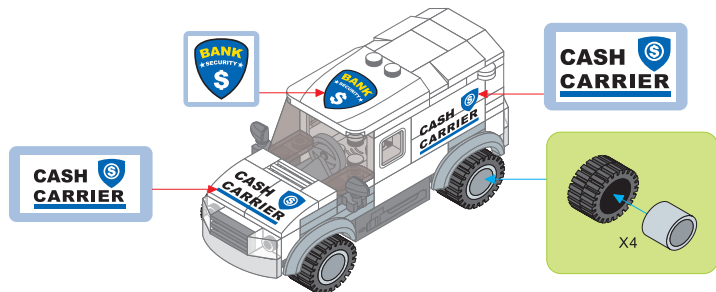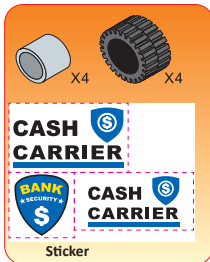  

1-11

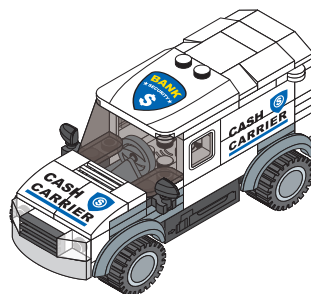 

Special instructions:

1. To replace the CR2032 button cell battery, please see the 4x12 Power Base Instruction manual.