


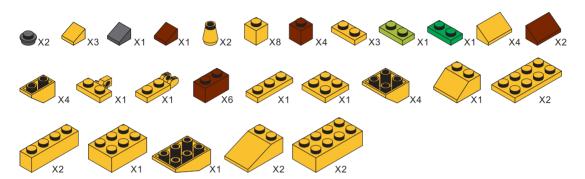

REGULAR BRICKS



STAX



Motion Activated Power STAX X1



Sound STAX X1



Light STAX X4



 
Light STAX X4




Connect STAX X2





Light STAX X2






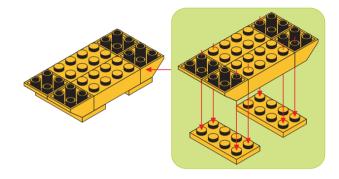

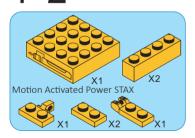


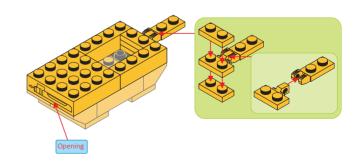



1-3

 




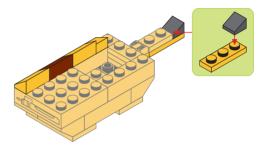


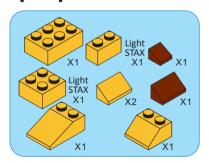


  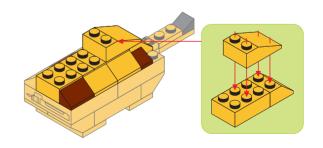






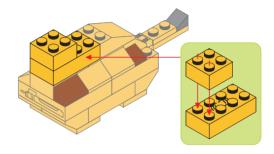




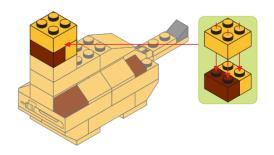


 


 


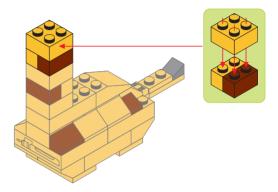




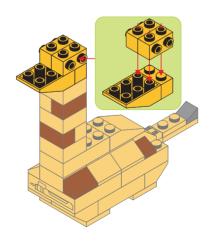




 





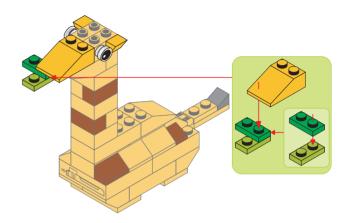


 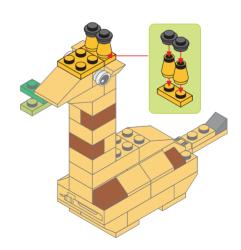







 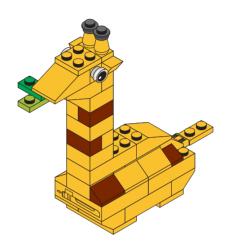


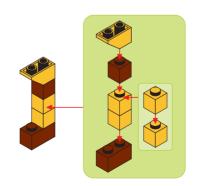


 




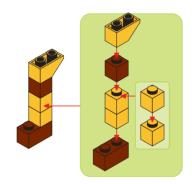





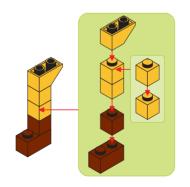






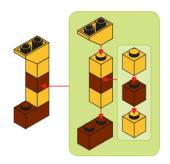

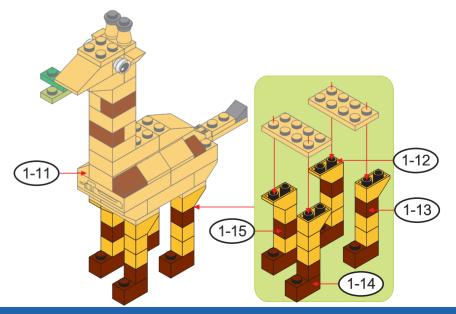



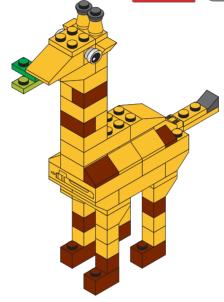

Special instructions:

- 1. To replace the CR2032 button cell battery, please see the 4x4 Motion Activated Power STAX Instruction manual.
- 2. As an upgrade, to avoid using batteries, we recommend replacing the button cell Power STAX with the rechargeable 4x4 Mobile Power STAX (Item# S-11503). You can purchase this from your STAX retailer or directly through our webshop at www.lightstax.eu!