


Remove insertion plate SOG® + SOG® II type F for Thetford C250/C260

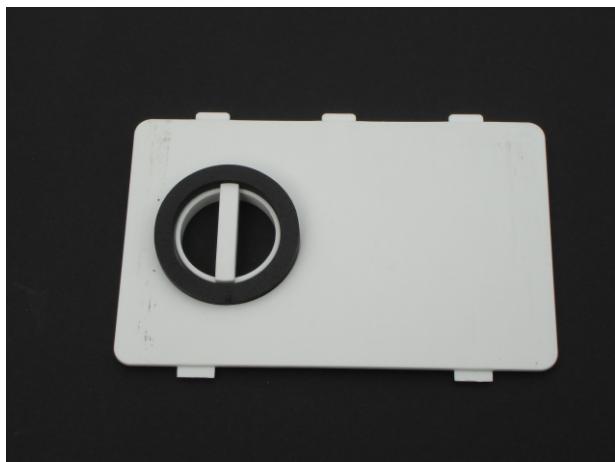

Remove insertion plate in the service compartment

(place in vehicle with the customer documentation)

The ventilation valve in the cartridge is opened via the central web in the drill hole. This must always be prevented when using a SOG ventilation; the ventilation valve must always remain closed (gas escape).