


Mounting the L-shaped aluminium bracket: SOG® + SOG® II type D for Thetford C400

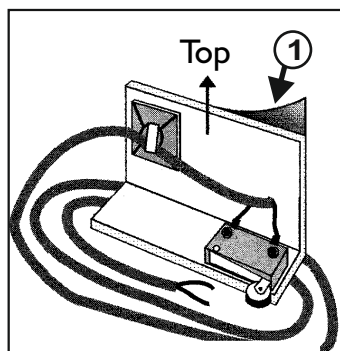

Mounting the L-shaped aluminium bracket:

Before sticking, clean the mounting surface on the sheet metal wall with methylated spirit.

The aluminium L-bracket must be so placed that the roller on the microswitch (2), is pressed in on the back edge of the closed blade valve mechanism.

NOTE: When the switch is pressed the current is interrupted so that the ventilator only runs when the blade valve is open.

When the correct position has been found only then remove the protective foil (1), from the adhesive surface of the L-shaped mounting bracket to mount it.

